

LAN Cable Tester

T0042001



FEATURES

The Lan cable tester is designed to check and troubleshoot the pin connections of RJ45 cables. It is ideal for testing the continuity of each of a LAN cable prior to installations on equipments.

- Can test RJ45 / UTP, RJ45 / STP cabling
- OPEN, SHORT and CROSS test function
- Full LED indication lights on main unit and remote unit
- Sound warning beeps
- Step / Auto Select Function
- Low battery indicator
- Auto power off function
- Small and portable
- Carry case included

Port Type : RJ45

Accessory: 9V Battery, RJ45 / BNC Adapter, RJ45 / USB Adapter

LED	LED NAME	CONNECTOR PIN
1	S	SHIELD
2	1	1
3	2	2
4	3	3
5	4	4
6	5	5
7	6	6
8	7	7
9	8	8



Please do not attach tester to a live circuit or it may cause permanent damage to the testing device.

To view Access' extensive ranges go to: www.accesscomms.com.au

Sydney (Head Office)
Brisbane Sales
Melbourne Office
Adelaide Office

Unit 1, 29 Prince William Drive, Seven Hills NSW 2147
28 The Gateway, Broadmeadows VIC 3047
71 Anzac Highway, Ashford SA 5035

Phone: (02) 9414 8888
Phone: (07) 3308 5555
Phone: (03) 9330 8333
Phone: (08) 8338 5540

sales@accesscomms.com.au
brisbane@accesscomms.com.au
melbourne@accesscomms.com.au
adelaide@accesscomms.com.au

LAN Cable Tester

T0042001

INSTRUCTIONS FOR OPERATION


STEP FUNCTION

1. Install a 9V battery into the master unit which supply power to the tester.
2. Connect one end of the cable to the master unit, and the other end to the remote unit.
3. Select step or auto-test depending on the test.


1. Push the test button to run the test on the cable and OPEN, SHORT, CROSS, FAIL OR PASS will light up.

PASS : Each Step
RJ45 UTP & STP :
Master & Remote each
step's LED will light up
When results are ready
it will beep three times.


RJ45 UTP Pass

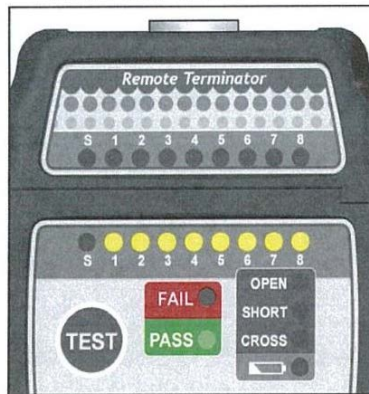

RJ45 STP Pass

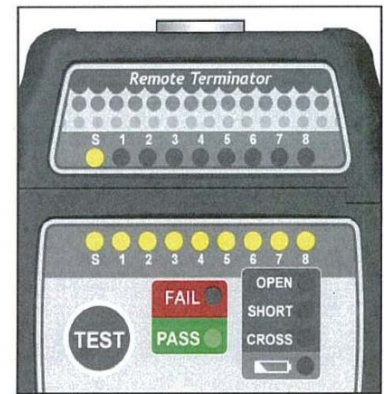

BNC (7,8) Pass

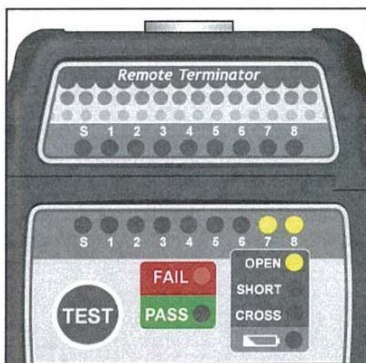

RJ12 Pass



USB (3,4,5,6) Pass



BNC (7,8) :
 Each Step 1 ~ 6
 will beep 1 time,
 Master LED Light Up
 Remote LED Unlit
 7, 8 Master & Remote will light up.
 Results will beep once.

RJ 12 :
 Each Step 1 & 8
 will beep 1 time.
 Master LED Light up,
 Remote LED Unlit,
 2~7 Master & Remote will light up.
 Results will beep Once.

USB (3,4,5,6) :
 Each Step 1, 2 & 7, 8
 will beep 1 time.
 Master LED Light Up.
 Result LED Unlit,
 3 ~ 6 Master & Remote will light up.
 Results will beep once.

LAN Cable Tester


T0042001

OPEN: The LEDs of Open Will light up LEDs of Open & Fail will light up


RJ45 STP 1,2 & 7,8 Open :

Each Step 1,2 & 7,8 will beep 1 time
Master LED Light Up
Remote LED is Unlit
LEDs of 3 ~ 6, Master & Remote will light up.
Results will beep once.

RJ45 STP 1,2 & 7,8 Open

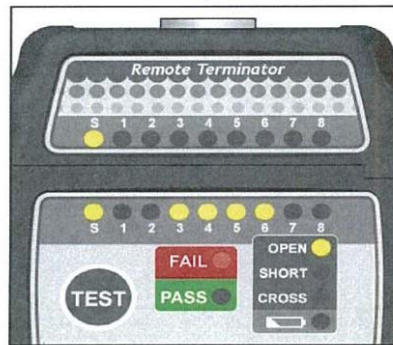

RJ45 UTP 3,6 & 4,5 Open

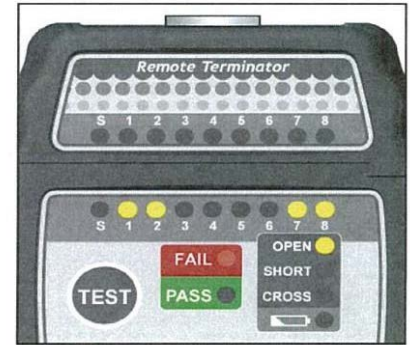

RJ45 UTP 3, 6 & 4, 5 Open :


Each Step 3, 6 & 4, 5 will beep 1 time
Master LED Light Up
Remote LED is Unlit
LEDs of 1, 2 & 7, 8, Master & Remote will light up.
Results will beep once.

SHORT: The LEDs of Short will light up LEDs of Short & Fail will light up


RJ45 UTP 1,2 Short :

Each Step 1,2 will beep 4 times
Master LED Light Up
Remote LED is Unlit
LEDs of 3 ~ 8, Master & Remote will light up.
Results will beep 4 times.

RJ45 UTP 1,2 Short

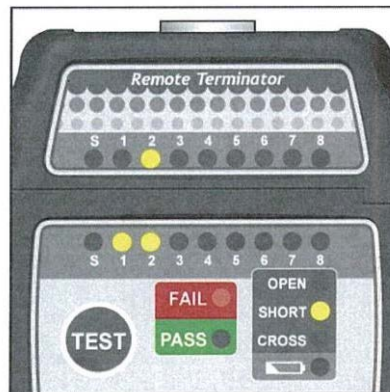

RJ45 STP GND,1,2 Short

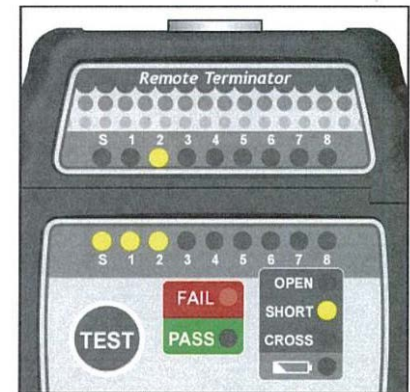

RJ45 STP GND 1, 2 Short :

Each Step 1, 2 will beep 4 times
Master LED & 1, 2 will Light Up
Remote LED is Unlit
LEDs of 3 ~ 8, Master & Remote will light up.
Results will beep 4 times.
(Remote LEDs will light when 3 ~ 7)

LAN Cable Tester


T0042001

CROSS: LED of Cross will light up It will beep 2 times

RJ45 STP 7,8 Cross :
Each Step LEDs of 1 ~ 6
Master & Remote will light up.

Step 7:
Master LED 7 will light up,
Remote LED 7 is unlit
Remote LED 8 will light up
Results will beep twice

Step 8:
Master LED 8 will light up,
Remote LED 8 is unlit
Remote LED 7 will light up
Results will beep twice.

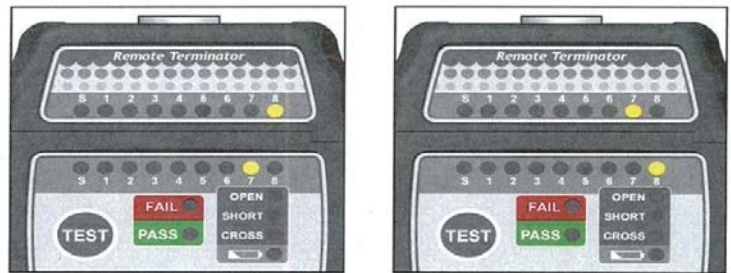


RJ45 STP 7,8 Cross




RJ45 STP 3,6 Cross
Each Step LEDs of 1, 2, 4, 5, 7, 8
Master and Remote will light up.

Step 3:
Master LED 3 will light up,
Remote LED 3 is unlit
Remote LED 6 will light up
Results will beep twice

Step 6:
Master LED 6 will light up,
Remote LED 6 is unlit
Remote LED 3 will light up
Results will beep twice.

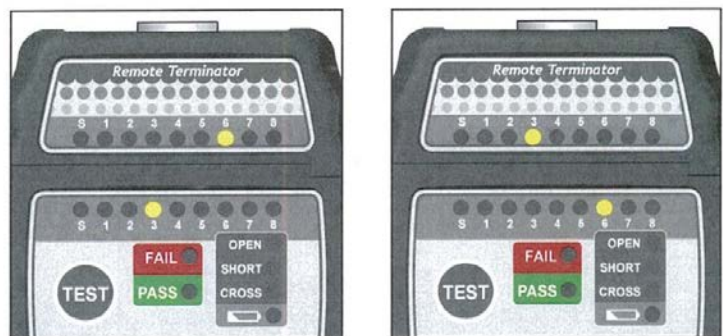

RJ45 STP 3,6 Cross

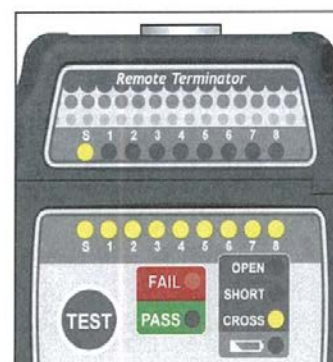

To view Access' extensive ranges go to: www.accesscomms.com.au

Sydney (Head Office)
Brisbane Sales
Melbourne Office
Adelaide Office

Unit 1, 29 Prince William Drive, Seven Hills NSW 2147
28 The Gateway, Broadmeadows VIC 3047
71 Anzac Highway, Ashford SA 5035

Phone: (02) 9414 8888
Phone: (07) 3308 5555
Phone: (03) 9330 8333
Phone: (08) 8338 5540

sales@accesscomms.com.au
brisbane@accesscomms.com.au
melbourne@accesscomms.com.au
adelaide@accesscomms.com.au

LAN Cable Tester


T0042001

AUTO FUNCTION


1. Push the Test Button once, this will scan all the cables and indicate the test results of OPEN, SHORT, CROSS, FAIL OR PASS.

PASS : Will beep three times.


RJ45 UTP

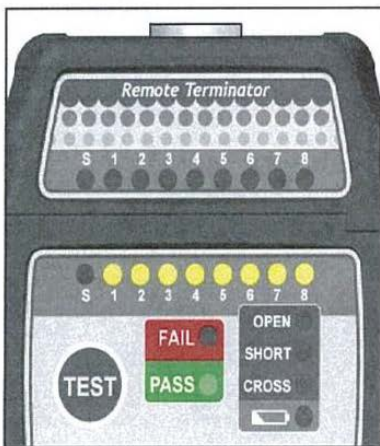


RJ45 STP

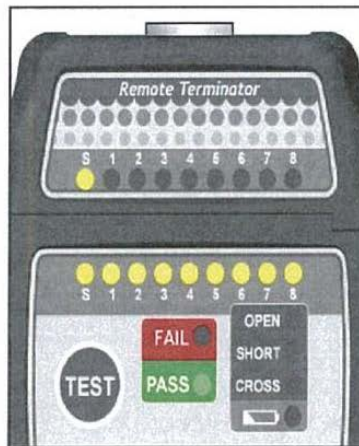


BNC (7,8)

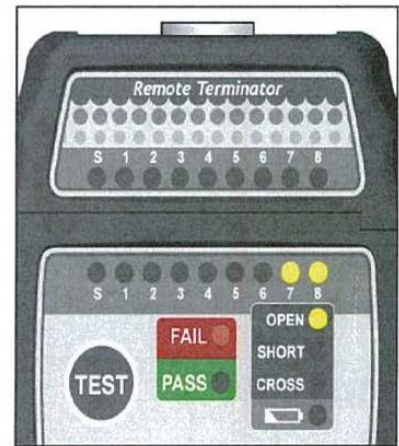

RJ12

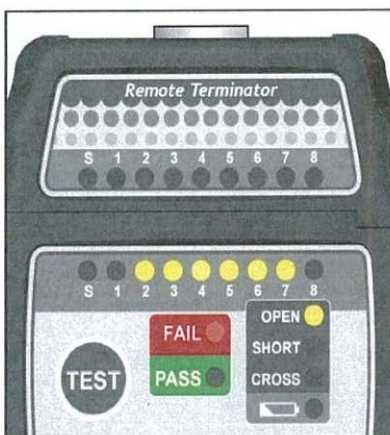

USB (3,4,5,6)

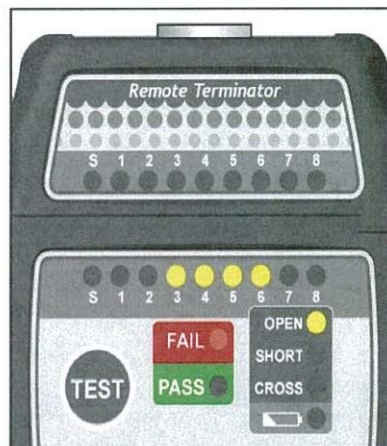

LAN Cable Tester

T0042001

AUTO FUNCTION

1. Push the Test Button once, this will scan all the cables and indicate the test results of OPEN, SHORT, CROSS, FAIL OR PASS.

**OPEN : The LED of Open will be lit
LEDs of Open & Fail will light up.
It will beep once.**

RJ45 STP 1,2 & 7,8 Open



RJ45 UTP 3,6 & 4,5 Open



LAN Cable Tester


T0042001

AUTO FUNCTION


1. Push the Test Button once, this will scan all the cables and indicate the test results of OPEN, SHORT, CROSS, FAIL OR PASS.

**SHORT : The LED of Short will be lit
LEDs of Short & Fail will light up.
It will beep 4 times.**

RJ45 UTP 1,2 Short

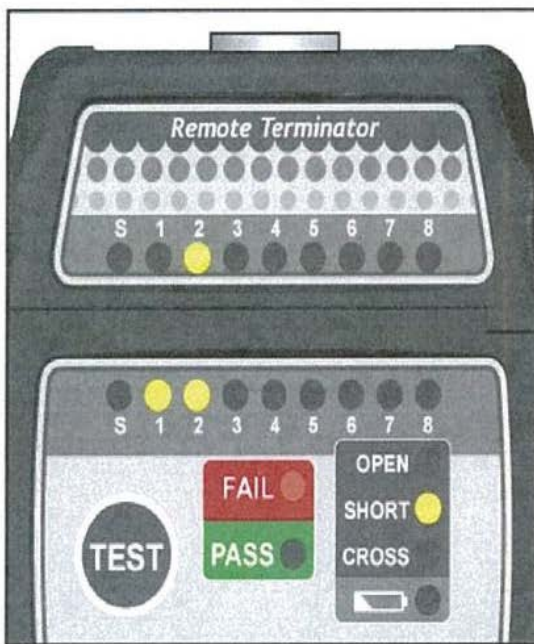

RJ45 STP GND,1,2 Short

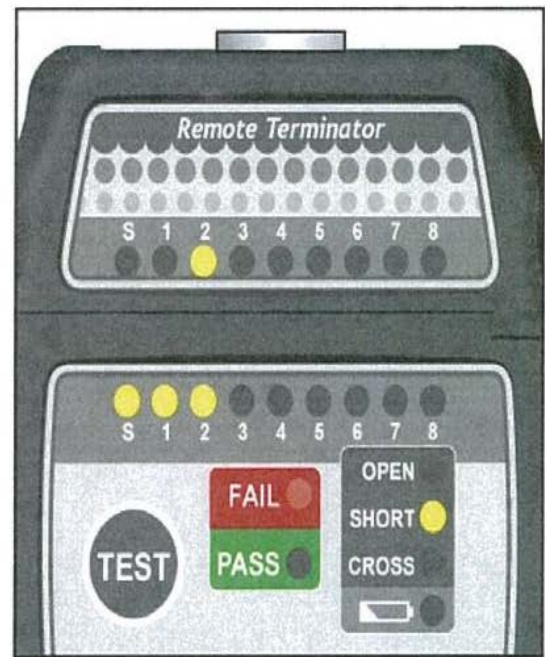

LAN Cable Tester


T0042001

AUTO FUNCTION

1. Push the Test Button once, this will scan all the cables and indicate the test results of OPEN, SHORT, CROSS, FAIL OR PASS.

**CROSS : The LED of Cross will be lit
It will beep 2 times.**

RJ45 STP 7,8 Cross

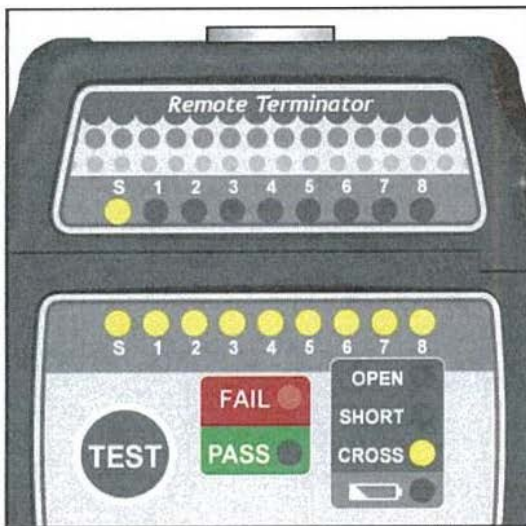

RJ45 STP 3,6 Cross

