


## CAT6A RJ45 WATERPROOF COUPLER P2328 INSTALLATION INSTRUCTIONS




### STEP ONE

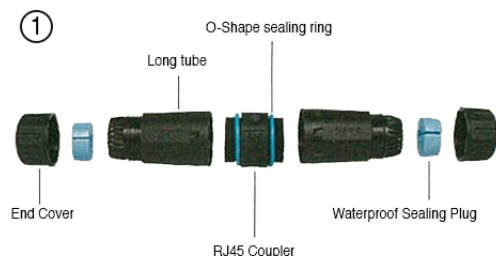


Accessories: 2pcs End Covers, 2pcs long tubes, 1 pc RJ45 Coupler, 2pcs O-shape sealling rings, 2pcs waterproof sealing plugs.

### STEP TWO

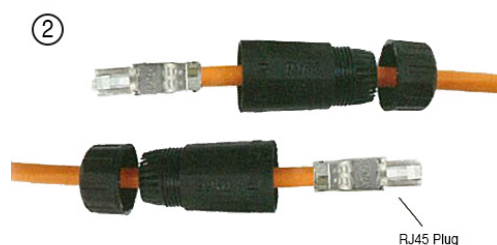


Pass the two cables through the end covers and the long tubes respectively.

### STEP THREE

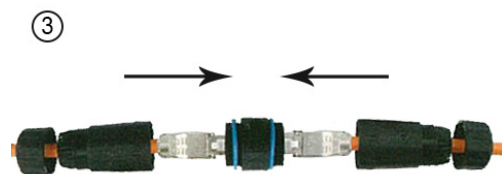


Insert the patch cords into the both ends of the RJ45 coupler.

### STEP FOUR

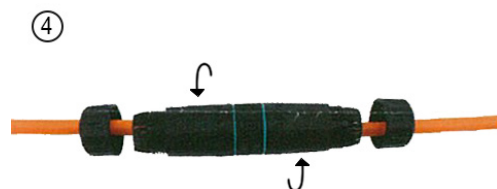

Screw the long tube tightly onto the RJ45 coupler as guided in the manual.

### STEP FIVE

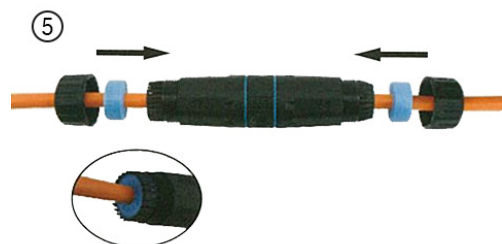

Lock the two waterproof plugs on the cable, then put them into the end of the long tube. Note: The plug is engraved with the word "waterproof" on one side outward.

### STEP SIX



Screw the end cover at both ends onto the long tube. Finally to check whether the waterproof plug is closely matched with the cables.

To view Access' extensive ranges go to: [www.accesscomms.com.au](http://www.accesscomms.com.au)